

Hair Dryer

User's manual

EN



SENCOR®

SHD 6503B / SHD 6503V

Prior to using this product, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of products. Only use the product in the manner as described in this user's manual. Keep the user's manual in a safe place for future use.

We recommend keeping the original shipping cardboard box, packaging material, receipt and warranty card at least for the duration of the validity of the warranty policy. When transporting, pack the product using the original packaging materials only.

Hair Dryer

SHD 6503B / SHD 6503V

CONTENTS

IMPORTANT SAFETY NOTICE.....	3
DESCRIPTION OF THE PRODUCT	6
INSTRUCTIONS FOR USE	7
CLEANING AND MAINTENANCE	7
TECHNICAL SPECIFICATIONS.....	8
PACKAGE INCLUDES.....	8
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT.....	8
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	8

IMPORTANT SAFETY INSTRUCTIONS

This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Do not allow children to play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.



Do not use this appliance near baths, showers, washbasins or other containers containing water.

If you will be using the appliance in the bathroom, unplug it from the socket after use because the presence of water presents a hazard even when the appliance is turned off.

As additional protection we recommend installing a residual current device (RCD) with a nominal trigger current no higher than 30 mA. Ask the electrician for advice.

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE IT FOR FUTURE USE.

- Before connecting this appliance to the socket outlet, make sure the voltage stated on the label of the product corresponds to the voltage in your wall socket.
- Never use accessories, which have not been supplied with this appliance or which have not been explicitly recommended by the manufacturer.
- This appliance is designed for domestic use only. Do not use it in industrial surroundings or outdoors.
- Do not spray the appliance with water or any other liquid. Do not submerge it in water or in any other liquid.
- Ensure that the power plug contacts do not come into contact with water or moisture.
- Do not place the appliance in the vicinity of an open flame or appliances that are sources of heat.
- Do not place the power cord near hot places or over sharp objects. Do not place heavy items on the power cord. Position the power cord so that it will not be stepped on or tripped over.
- Ensure that the inflow and outflow openings are not blocked while the appliance is running. If any of the openings become blocked, the appliance will shut down automatically. Disconnect it from the power socket and allow it to cool down for several minutes. Remove the obstacle blocking the inflow or outflow of air before turning the appliance on again.
- Disconnect the appliance from the power socket after every use.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling out the plug of the power cord.
- If the power cord is damaged, have it replaced at an expert service centre. It is forbidden to use the appliance if it has a damaged power cord or plug.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty policy.

Hair Dryer

SHD 6503B / SHD 6503V

DESCRIPTION OF THE PRODUCT

A



- ① Protective rubber side guard
- ② Opening grill for the suction of air
- ③ Main switch
 - 0 - off
 - 1 - 1st power level
 - 2 - 2nd power level
- ④ hanging loop

INSTRUCTIONS FOR USE

- 1) Before connecting the product to the power source check the position of the dual voltage switch (see further).
- 2) Insert the plug into the power socket.
- 3) On the handle of the dryer, depending on need select the first (position "1") or the second (position "2") power level and start drying your hair.
- 4) To completely turn off the dryer move the switch to the "0" position.



Tip:

To achieve the best results wash your hair with shampoo before using the dryer, then dry your hair using a towel to reduce excessive moisture and then comb your hair. We recommend the use of a conditioner or hair lotion, which simplifies combing and drying your hair.

Hanging loop

If during drying you need to put the fan down, you can hang it by the hanging loop.

DUAL VOLTAGE SWITCH

This hair dryer is equipped with a dual voltage switch. Before connecting the product to a power socket check the position of the dual voltage switch (to turn the switch you can use a coin).

For a power source from 100V to 120V move the switch to the position labelled 120V. For a power source from 220V to 240V move the switch to the position labelled 230V. The selected voltage must correspond to the voltage in your power socket otherwise the product may be damaged.



CLEANING AND MAINTENANCE



Caution:

Before cleaning disconnect this product from the power source.

To clean the outer parts of the product, use a soft cloth dipped in lukewarm water. Do not use aggressive cleaning products and solvents as this could damage the surface of the product.

We recommend that you clean out the inflow parts of the dryer, where hair is often sucked in.

Hair Dryer

SHD 6503B / SHD 6503V

TECHNICAL SPECIFICATIONS

Voltage	120 V AC 230 (alternate current)
Nominal frequency	50 Hz / 60 Hz
Rated power	1200 W
Safety class (with regard to electric shock protection)	II
Noise level	73 dB(A)

The declared noise emission level for this appliance is 73 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

PACKAGE INCLUDES

- 1) Hair dryer
- 2) User's manual
- 3) Warranty card

The manufacturer reserves the right to alter the text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product.

Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your vendor



This product meets all the basic requirements of EU directives that apply to it.